

ARJONA-MONTEITH FIXED TOUCH SCREEN STYLE ROOM

System Startup

1. Unlock equipment cabinets to expose the equipment racks.
2. Touch the screen anywhere to begin. This will awaken the system and show the **Welcome Screen**.
3. Touch the screen again to turn the AV Rack system power on and display the **Main Menu** (see figure 1).



Fig 1 Main Menu

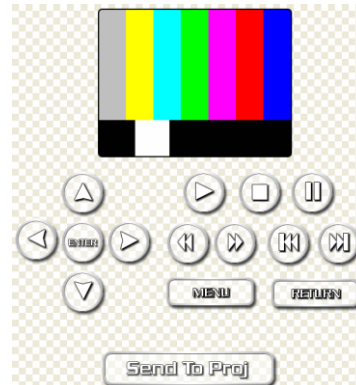


Fig 2 Sample Control Panel


4. **Select Source: Selection Buttons** along the left portion of the viewable window, select source such as the *Document Camera*, *VCR* and *Cable TV Tuner*. Pressing the icon will open that equipment's control panel (see figure 2).
5. **Send Source to projector:** Press "Send to Proj" for classroom view.
NOTE: Audio follows last source sent to the projector.

The **Main Menu** of the **Fixed Touch Screen** shows the icons for controlling the room located around the outer edge (left, right, and bottom portions) and consist of: **System Power**, **Projector**, **Screen&Lighting**, **Mic Volume**, **Program Volume**, and **Source Selection Buttons**.

The **Preview Pane** displays whatever source has been selected. It must be sent to the projector for classroom to view it. To make this view full screen, press the **Preview Pane**. To revert back to the **Preview Pane**, press anywhere on the screen

System Shutdown

1. Press the "Turn System Off" button on the lower-left.
2. A shutdown confirmation screen will appear. (See Figure at right) Select YES to shut the system down (if NO, press NO and re-select your previous source).
3. Lock all cabinets.

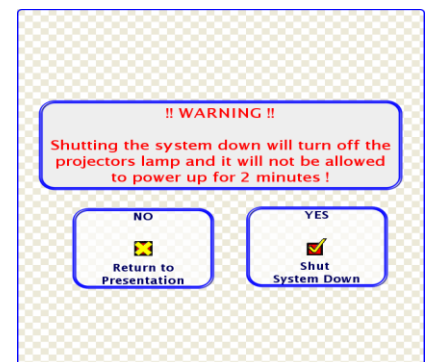

PLEASE TURN SYSTEM OFF AT THE END OF YOUR CLASS: THIS PREVENTS SYSTEM FREEZE-UP AND EXTENDS PROJECTOR LAMP LIFE

**FOR ANY QUESTIONS OR PROBLEMS
CALL THE AVT HELPDESK @6-1774**