

# **HI-TECH CLASSROOM REFERENCE MANUAL:**

## **CD/DVD Player**

**AVT-ITL  
486-1774  
Fall 2009**

## Overview

Many of the Hi-Tech Classrooms are equipped with standalone DVD players that can also play audio CDs. In addition to this, all of the computers in the classrooms come standard with a CD/DVD ROM drive and the necessary software to play both DVD Videos and CD Audio.

***IMPORTANT:*** *Due to DMCA regulations, DVDs that are not of a Region 1 Coding will not be able to play in the Hi-Tech Classrooms. We do apologize for the inconvenience; however, this is due to the current laws protecting copyrighted materials.*

## Accessing the CD/ DVD Player

### Push Button Classroom

Locate the CD/DVD player within the AV rack and verify that the power is on to the unit. Eject the disc tray via the eject button on the front of the unit and insert the disc. Press the button labeled “CD/DVD” from the row of white Source Buttons.

***Note:*** *The unit is controlled via the buttons provided on the face of the piece of equipment.*

***Note:*** *If no image appears on the preview monitor, verify that it has been properly set to view this signal type via the signal switch.*

### Fixed Touch Screen Classroom

Locate the CD/DVD player within the AV rack and verify that the power is on to the unit. Eject the disc tray via the eject button on the front of the unit and insert the disc. Select the DVD/VHS source from the set of source buttons on the left-hand side of the screen. Controls for the system will appear when the source is chosen.

### Tech-Ready Classroom

The only CD/DVD player available in this style of room is found within the computer that is provided inside the wall mounted box.

***Note:*** *Each classroom is equipped with a computer which contains a DVD Rom drive. If you are in a room without a DVD player, you can utilize the classroom computer to view DVDs or listen to CDs.*