

HI-TECH CLASSROOM REFERENCE MANUAL:

Laptop

**AVT-ITL
486-1774
Fall 2009**

Overview

The Hi-Tech Classrooms offer laptop connections for both PC and MAC (though Macintosh laptops require that a video dongle be employed and provided by the laptop owner). These cables can be found resting on top of the teaching station and include a video and an audio cable.

Note: The AV department is not responsible for providing those “dongles” required by the Macintosh laptops.

Steps for connecting a laptop are as follows:

1. Locate the PC connection cables found on the teaching desktop.

Note: If in a Tech-Ready room, the connections can be found on the AUX Plate. The User is responsible for providing the connection cables required, (15-pin VGA Cable for video, 1/8” Mini-DIN for audio, and an ethernet cable for internet access).

2. Attach appropriate cables to the laptop, plugging the audio cable into the headphones port if audio is desired.
3. “Port out” the laptop. **Required Resolution: 1024 x 768 AT 60HZ.**

Note: Frequently, Macintosh computers will have much higher resolution rates set. Please be sure that the proper resolution is set before connecting it to the system.

Accessing the Laptop

Note: In all rooms (sans the Tech-Ready style) laptop connection cables will be situated near the monitor on the teaching station. In the case of the Tech-Ready style of classroom, the laptop hook-ups can be found on the AUX plate below the Tech-Ready wall box.

Push Button Classroom

Press the button labeled “Laptop” from the row of white Source Buttons.

Fixed Touch Screen Classroom

Touch the button labeled “Laptop” from the upper set of source buttons.

Tech-Ready Classroom

Touch the button labeled “Laptop” from the set of source buttons.