

# **HI-TECH CLASSROOM REFERENCE MANUAL:**

## **Slide Projector**

**AVT-ITL  
486-1774  
Fall 2009**

## Overview

Some Hi-Tech classrooms are equipped with slide projectors. Projectors may be found in a *Projector Cabinet* or in a *Projection Booth* located in the rear of the Hi-Tech classroom. *Projection Booth* projectors are FIXED while projectors located in the *Projector Cabinets* are MOBILE, and must be removed and placed atop the cabinet itself.

*Note: If you plan on using the slide projector located in a room that has been deemed “keyless”, you WILL need a key in order to access the slide projector cabinet/booth.*

## Using Slide Projector

### Push Button Style

Plug 5-pin *Remote Connector Cable* into the rear of the projector. This cable may be either inside the cabinet or routed outside the cabinet. Load *Slide Carousel Tray* into projector. Manually turn the projector ON. Projector may now be controlled through a remote control located in a Teaching Station Drawer.

### Fixed Touch Screen Style

Verify that the *Projection Booth Equipment Rack Master Power Switch* is ON. Load the *Slide Carousel Tray* onto the projector. Access the Slide Projector via the upper set of source button, then turn the power ON. Controls for the slide projector are provided on the touch screen.

### Tech-Ready Classroom

*This style of classroom does not provide this feature.*