

HI-TECH CLASSROOM REFERENCE MANUAL:

VHS Player

**AVT-ITL
486-1774
Fall 2009**

Overview

Presently, there are two types of VCRs located in Hi-Tech Classrooms: *Standard Format* VCRs and *World Format* VCRs. The *Standard Format* VCR will only play USA format videos (NTSC). The *World Format* VCR will play all video formats (NTSC, PAL, M-PAL, N-PAL, SECAM, and MESECAM). Please note that the majority of the World Format VCRs have a face that flips open to expose both the VHS tape input area and the VCR controls.

Accessing the VCR

Push Button Classroom

Make sure VCR power is ON. Insert the VHS tape and select VCR from the row of white Source Buttons.

Note: If no image appears on the preview monitor, verify that it has been properly set to view this signal type via the signal switching buttons on the preview monitor.

Fixed Touch Screen Classroom

Make sure VCR power is ON. Insert the VHS tape and select DVD/VCR from the Source Buttons on the left-hand side of the main screen. Controls for the VCR will be provided on the touch screen itself.

Tech-Ready Classroom

This style of classroom does not contain a VCR. If one is needed it will need to be brought in by the individual requiring it, along with all necessary cabling.